

**PHOTO** *Tex*<sup>TM</sup>

# **SUGGESTED WALL PAINTS, PRIMERS & BOND ADDITIVES**








# SUGGESTIONS.

With the new trend in paint additives (*anti-microbial, anti-stain, anti-mold*) and the recommended wait of 30 days on a newly painted wall, we have gathered a few short-cuts and added protection, *as needed*, at your discretion.





**Behr Premium Plus  
Interior Flat  
Paint & Primer**

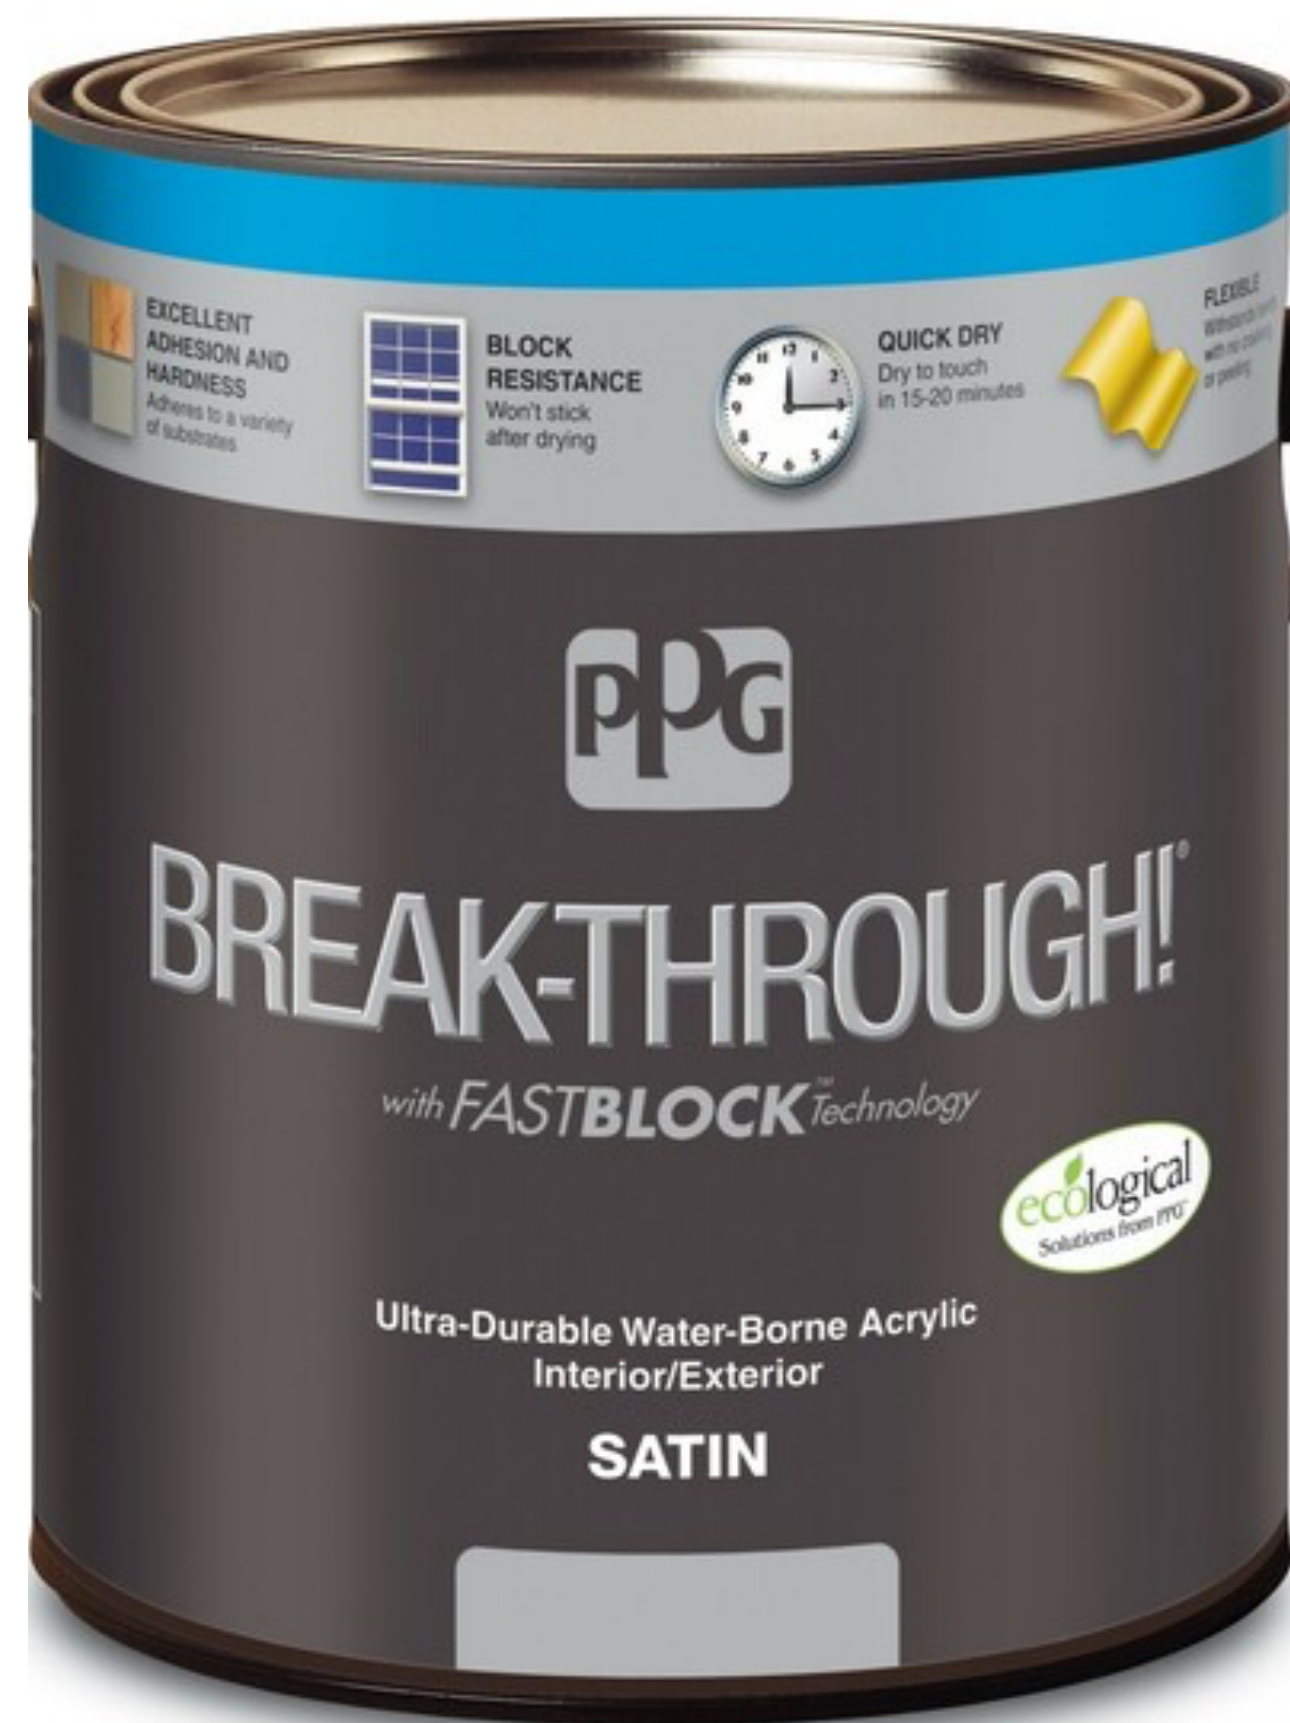

**Break-Through! V51-V  
Satin Clear**

# PAINTS.

Need to paint the wall and cannot wait 30 days? With these, you will only need to wait about 7 days.



# FULL WALL PRIMERS

\*Installers suggest the below primers that enhance the adhesive tack.



**\*24 hour dry time with slight tack.**



**\*Strong tack. Use light coat and apply wet.**



**If not painting on drywall, use suggested primer.**



# INSTALL WALL BOND ADDITIVES.

## *HELPS WITH:*

- SEMI-TEXTURED WALLS
- ANTI-MICROBIAL PAINT ADDITIVES
- ANTI-MOLD PAINT ADDITIVES
- ANTI-GRAFFITI PAINT ADDITIVES
- ANTI-STAIN PAINT ADDITIVES



**Extra Strong Tack**



**PTex Adhesive Booster**

**\*Contact [orders@phototexgroup.com](mailto:orders@phototexgroup.com)  
to order and learn more!**